



- JMP1 Connect pin 20 to CTS in
- JMP2 Connect pin 4 to CTS in
- JMP3
 - 1-2 Connect pin 5 to RTS out
 - 2-3 Connect pin 5 high always
- JMP4
 - 1-2 Connect pin 6 to RTS out
 - 2-3 Connect pin 6 to RTS out

R1.1 3/26/2019 CHANGE PART NUM J2, D1,2,3,4 TO 5V TVS DEVICES
REARRANGE AND ADD JUMPERS J1,2,3,4



Title		
USB TO RS232 25 PIN		
Size	Number	Revision
B		1.1
Date:	3/26/2019	Sheet 1 of 1
File:	C:\Bob\USB_Uart_RS232_DB25.SchDoc	Drawn By: Bob Harbour