



Drivers may be controlled through J1-6 or always enabled by placing JMP1. Drivers will be disabled if neither is used.

Receivers may be controlled through J1-7 or always enabled by placing JMP2. Receivers will be disabled if neither is used.

Bolt Holes can be tied to the GND by placing JMP3.

Title		
<b>RS422 Driver Board</b>		
Size	Number	Revision
A		<b>1.0</b>
Date:	9/6/2019	Sheet 1 of 1
File:	C:\Bob\...\RS422_Shifter.SchDoc	Drawn By: Bob Harbour