


# LEDBOY QUICK START GUIDE:

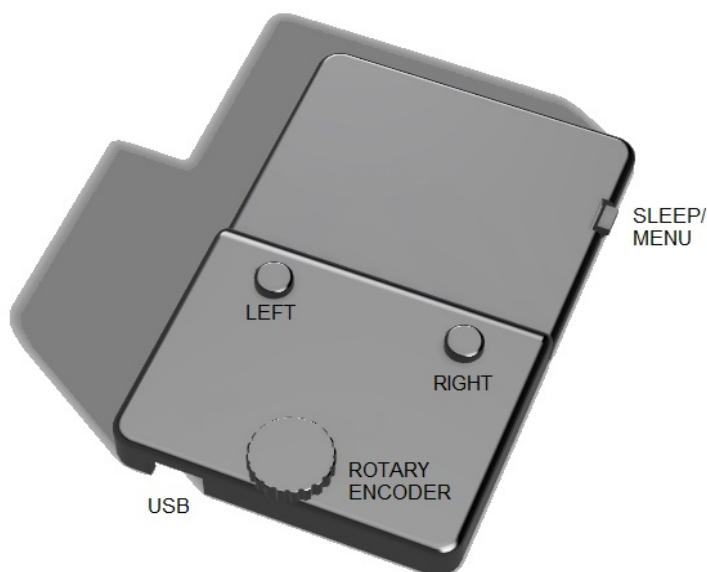

MAKE SURE TO CHARGE YOUR LEDBOY FULLY BEFORE PROCEEDING, WHEN FULLY CHARGED, THE CHARGE LED ON TOP THE USB PORT TURNS OFF, IF THE LED IS ON, THE BATTERY IS CHARGING.

-WAKE UP FROM SLEEP BY PRESSING "SLEEP/MENU". AFTER 10 SECONDS WITHOUT ANY ACTION, THE CONSOLE GOES TO SLEEP AUTOMATICALLY.

-CONFIG HOURS, COLOR, AND BRIGHTNESS: PRESS THE SLEEP/MENU BUTTON UNTIL "MENU" IS DISPLAYED IN THE SCREEN CHANGE OPTIONS BY PRESSING LEFT OR RIGHT, CHANGE SELECTED OPTION VALUE WITH THE ROTARY ENCODER, SELECT THE "END" OPTION ONCE CONFIGURATION IS FINISHED AND PRESS "SLEEP/MENU" TO EXIT.

-ENTER GAMES: WITH THE CONSOLE IN ON STATE (DISPLAYING THE TIME) PRESS EITHER THE LEFT OR RIGHT BUTTON, SELECT THE DESIRED GAME BY PRESSING LEFT OR RIGHT AND ENTER THE GAME BY PRESSING THE "LEFT" AND "RIGHT" BUTTONS AT THE SAME TIME OR THE "SLEEP/MENU" BUTTON

-IN GAME MENU: WHILE PLAYING A GAME, YOU CAN ACCESS THE GAME MENU BY PRESSING THE "SLEEP/MENU" BUTTON FOR 2 SEC. ONCE IN THE MENU, YOU CAN CHANGE THE OPTION BY PRESSING THE "LEFT" OR "RIGHT" BUTTONS AND ENTER BY PRESSING "SLEEP/MENU".

- SCORES ARE SHOW ONCE THE GAME IS FINISHED, IF YOU WANT TO DELETE THE CURRENT HI SCORE KEEP THE "SLEEP/MENU" BUTTON FOR 5 SEC. UNTIL THE WORLD "CLR" IS SHOWN.

-YOU CAN RESET THE CONSOLE BY PRESSING "LEFT" "RIGHT" AND "SLEEP/MENU" AT THE SAME TIME FOR ONE SECOND.

-WHILE DISPLAYING TIME, BATT STATUS IS SHOWN IN THE TOP RIGHT CORNER WITH A GREEN COLOR FOR 100%, YELLOW FOR 80% AND BELLOW AND RED FOR 30%.

-TO LEAVE THE CLOCK ALWAYS ON: PRESS BOTH LEFT AND RIGHT BUTTONS FOR ONE SECOND, YOU CAN CONTROL BRIGHTNESS WITH THE ROTARY ENCODER, TO EXIT PRESS EITHER THE LEFT OR RIGHT BUTTON. IN THIS MODE BATTERY IS DRAINED FAST.

FOR MORE DETAILED INFO AND HOW TO FLASH PLEASE READ:

<https://hackaday.io/project/182431-ledboy-retro-inspired-led-console-stuck-in-the-70>