

# Wireless Doorway Monitor Guide

*The following pages should help you understand how to use this system effectively.*

*Page 2 Latest Event Screen*

*Page 3 Set Custom Alarms*

*Page 4 Mobile Receiver Use*

*thank you, Hayden*

*[www.httech.com.au](http://www.httech.com.au) - Web Design & IT*

Comments / Feedback / Problems:

## Base Station Screen 1 – Latest Events


- Shows a scrollable list of the latest 200 events (movement in a doorway), scroll with the UP/DOWN buttons.
- Shows “Alerted” next to an event that was “Alarmed”, such events are sent to the mobile units.
- Mode: All = All events sent to mobile.
- Mode: Custom = Only doors chosen in screen 2 will be sent to mobile units.





## Base Station Screen 2 – Set Custom Alarms

- Shows a scrollable list of all the doors, scroll & select a door with UP/DOWN buttons, the selected door is shown by the arrow.
- Toggle the “Alarmed” option of a selected door with the “ON/OFF” button.
- Only “Alarmed” doors will be sent to the mobile units when in Mode: Custom

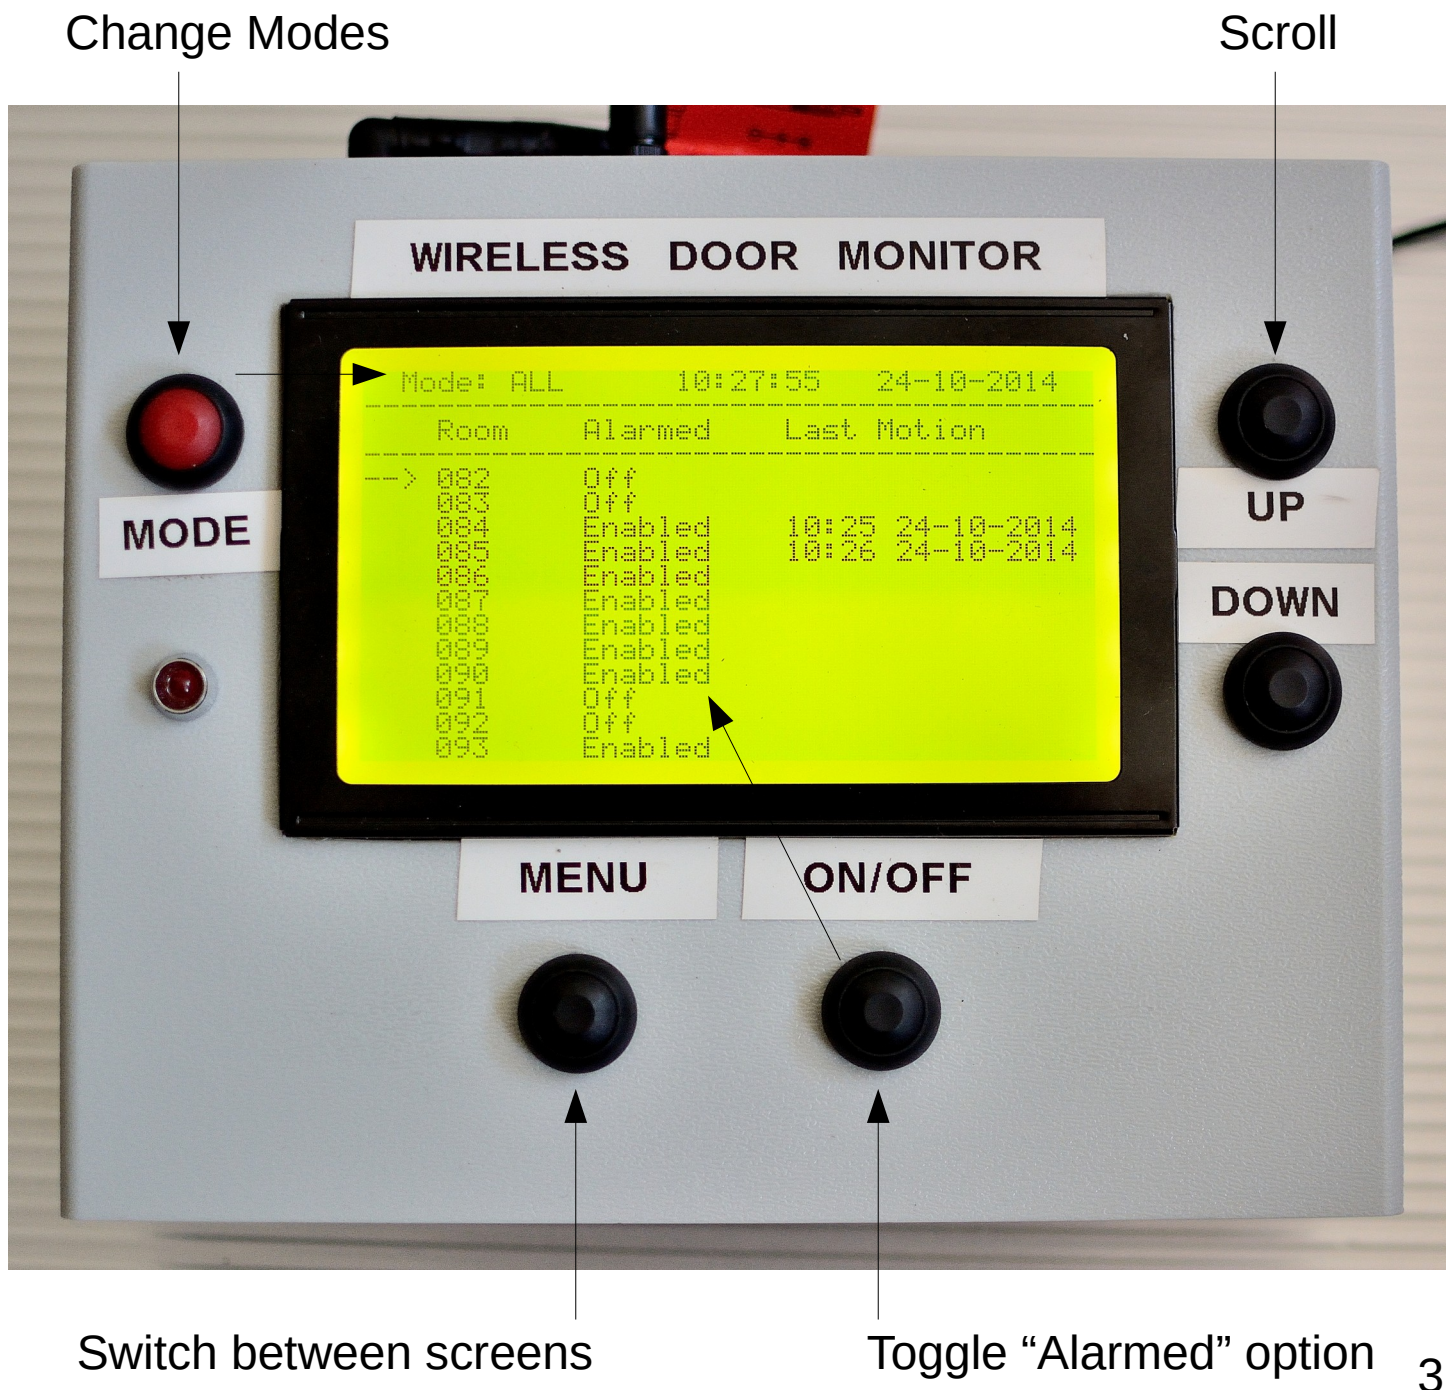

## Mobile Receiver

Stop Beeping



(Power Hold 5 Sec.)



- Shows the 5 latest events that the base station has “alarmed” about.
- Will beep continuously when a new event is received, press the button to stop it beeping.
- New events are highlighted, and “NEW” is displayed.
- Will also beep once and display “NO SIGNAL” if out of range.
- To charge, plug lead marked “DOOR MOBILE CHARGER” in while turned on. Full charge from 0% will take 15 hours, though the charger can be connected/disconnected at any time, particularly if still partially charged.



← Charge Plug