



5V
GND

GND
ERROR
RESET
STEP
DIRECTION

ISP