

RetroShield Z80 Assembly Instructions

Rev A, 2019/03/08

Copyright 2019, 8BitForce.com

Z80:

Solder parts in this order:

C1 = 100nF

C2 = 100nF

C3 = 22pF

R1 = 33 ohm


R2 = *does not exist*

R3 = 680 ohm


U1 socket

J1 header

LED1 = Red

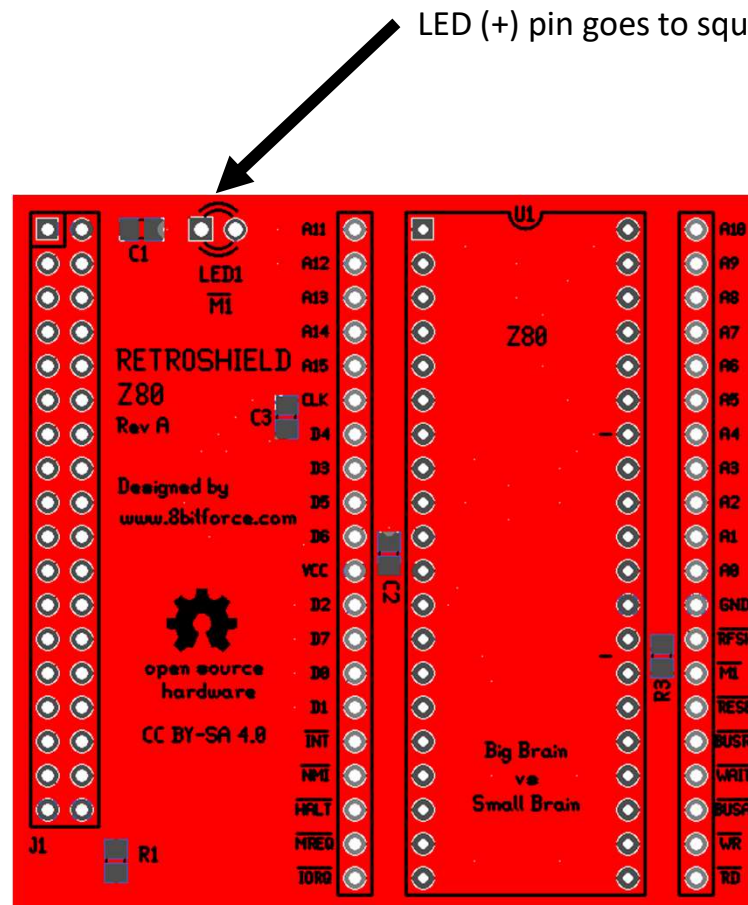

LED (+) pin goes to square hole.

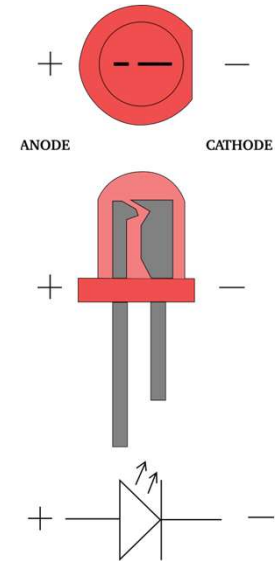

https://commons.wikimedia.org/wiki/File:%2B_of_LED_2.svg

Probe points

If you want to attach headers, then be careful b/c access to SMD components will be difficult.