


C32, C33 and C34 were added for precaution and because of the early prototyping supply problems. Now it is only necessary to mount one of them but the footprints are still there for the future. However, the C17 MUST be mounted!

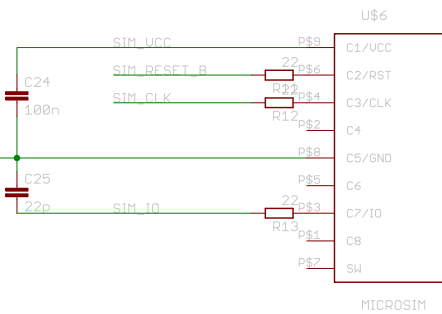

TITLE: fun2016_U1_3_17	
Document Number:	REV:
Date: not saved!	Sheet: 2/4