

Solar UPS V1

Solar Uninterruptible Power Supply

„Add-on Board” variant



Installation Manual

<http://www.solar-ups.eu>

You can find there a downloadable datasheets and guides.

Warranty	Stamp
Date:	
Distributor:	
Serial Number:	

The warranty refers only to undamaged devices operated under the specified conditions of use!


HW: V1R2

2017. january 20.

State outputs


Two charging status signals are led through the Solar UPS; the signals of **CHARGE** (CN2 connector 3. pin or CN5 connector 7. pin) and **FAULT** (CN2 connector 5. pin). Their conditions are indicated by the LED on the module with green or red colour. Indication of the conditions can be solved with a LED in the same way (first figure), as well as, their connection to the processor on the fed circuit. (second figure). Possible conditions:

	STBY or SHTDWN	BATTERY FAULT	CHARGING	TEMP FAULT
CHARGE	HIGH-Z	HIGH-Z	LOW	LOW
FAULT	HIGH-Z	LOW	HIGH-Z	LOW

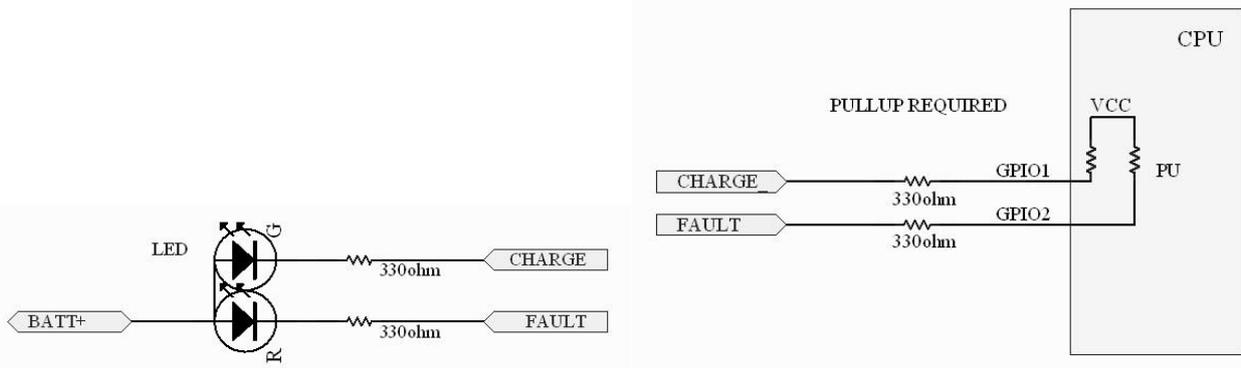

Shutdown input


The operation of the charging current can be disabled in the Solar UPS module with the control signal **SHTDWN** (CN2 connector 7. pin). When this input is pulled in the low condition then charging of the battery will be disabled. Controlling must be solved with an OC transistor circuit (below figure) because the value of the internal resistance in the SHTDWN port must not be modified, when not in the pulled low condition (any other solution may result in faulty operation)..

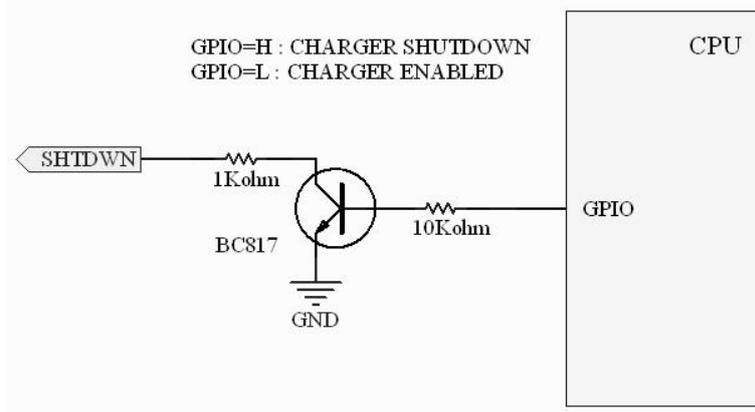

Select VCC and set temperature protection

Voltage of VCC+ output may be 3.3V or 5V, depending on the setting of the **VCCSEL JP3** jumper of the Solar UPS module. When this jumper is open then the default voltage of the VCC+ output is 3.3V. When the jumper is closed, then the voltage will be 5V at the VCC+ output.

Temperature protection of the charger can be optionally activated. This can be done with the **JP2** jumper. In its closed position the charging current will charge the battery only in the ambient temperature range of 0...45 degrees. In open condition the protection is inactive; the temperature would not affect charging (default).

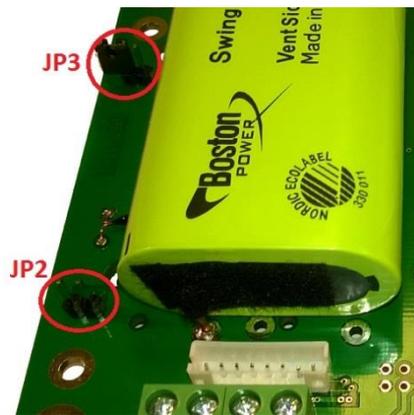

Getting started, first steps

Parameters of the solar cell: Power 5-20W (10 W is the optimum), 16-24V of voltage to maximum performance, max. 34V of idle voltage. When connecting the solar cell, special attention should be paid to the fact, that the panel is continuously under voltage in sunshine. Care must be taken that the cable coming from the solar cell should only be wired to the DCIN+ and GND (**CN1**) ports!

The charger is tuned in default to panels belonging to the maximum performance of **17.0...17.5V**. In case the parameter of the connected solar panel differs from this, then **POT1** must be set. The way of setting: With the help of a laboratory supply unit - voltage equal to that belonging to the maximum performance of the panel shall be given to the DCIN+ and GND (CN1) ports. Then **POT1** should be set so that voltage on the **JP1** measuring point be **2.75 V** (below figures).

